

**Disconnector / disconnector operating cover** is used in flameproof transformer stations in order to protect the disconnector or disconnector operating sleeve against mechanical damage.

